


## Geba Key switch Diagram

Main power - WHITE cable.

Motor cable - BLACK cable.

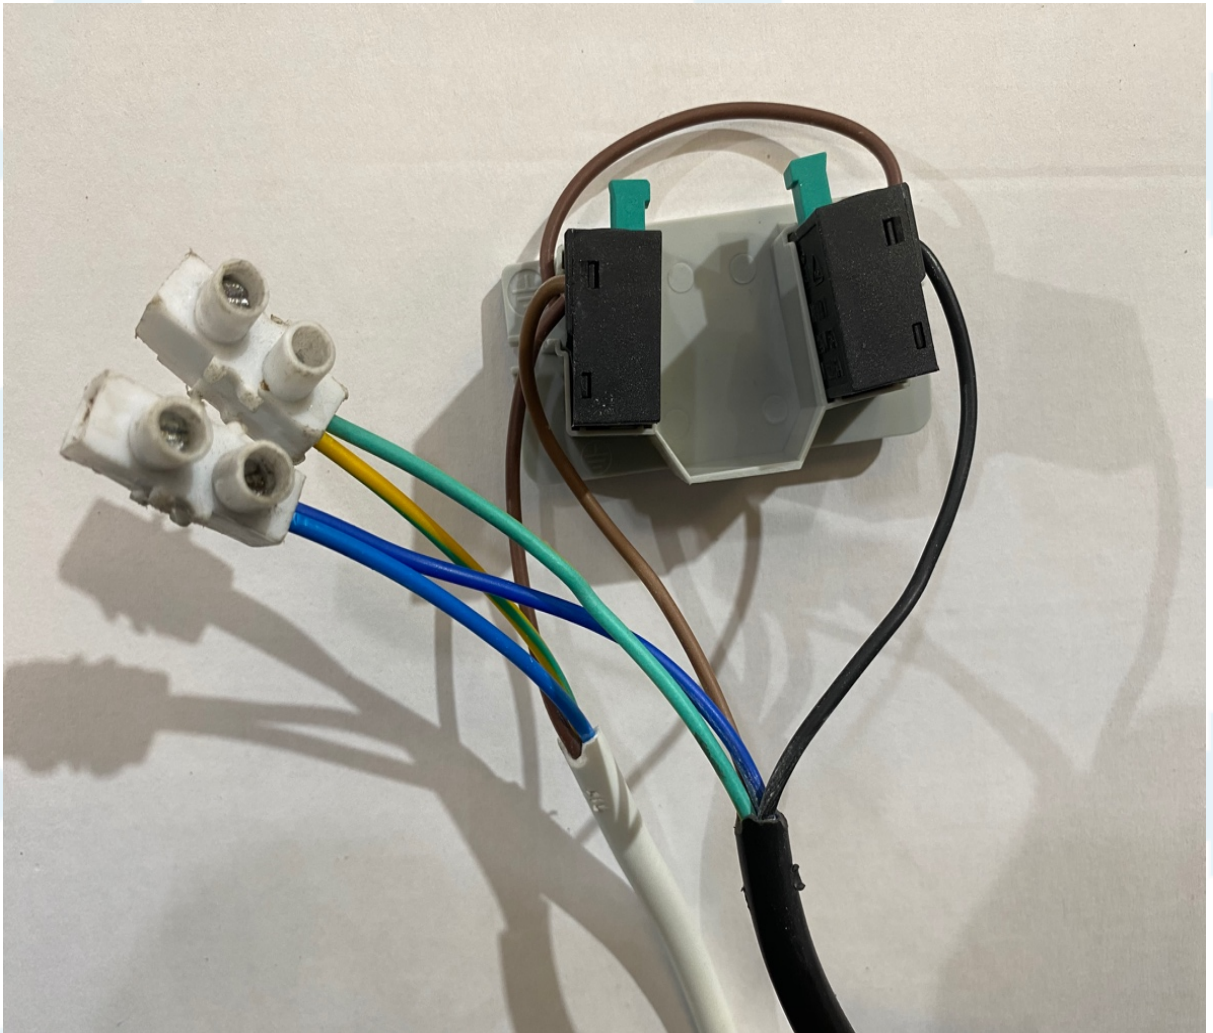

The BLACK and BROWN wires coming from the motor are directional wires, so may need to be swapped over if the operational direction is incorrect. (i.e up button taking the door down & vice versa)

The directional BLACK & BROWN wires go to the front of the switch and the Main BROWN power cable to the rear of the switch with a link wire across to the other side as shown.

Connect BLUE neutral wires together.

Connect YELLOW/GREEN earth wires together.

Pictures are for illustration purposes only, connector blocks are not provided and further fittings may be required.