

External Manual Release

- 1) Mark the height you require your external override to go through the wall.
- 2) Drill a 22mm hole all the way through the wall.
- 3) Place the plastic tube into the hole from the front with the plate flush against the outside wall and mark the 4 holes for fixing the plate.



- 4) Then go inside and mark the length to cut off the plastic insert.
- 5) Remove from the wall, drill 4 fixings outside and cut plastic tube to size then reinsert in wall.
- 6) Insert universal joint at bottom of shaft into the plastic tube end and mark 2 fixing holes.



- 7) Mark the length you need to cut the shaft to make fit with stem.
- 8) Cut shaft to size and drill a 5mm hole in the shaft so you can reapply clip to attach shaft to stem.
- 9) Drill 2 fixing holes for the universal joint
- 10) Attach shaft to stem with clip and place universal joint into plastic tube and screw to wall.



- 11) Remove lock and check to make sure the unit turns.



Use of the manual release whilst power is turned on, can cause damage to the limits. Please make sure power is fully turned off before any adjustments. Failure to do this may invalidate your warranty.

Please note in the event of a power failure when the door is in the closed position you must turn the crank handle in the ANTI CLOCKWISE direction to open the door.